




VarioDivider G4

ASSEMBLY INSTRUCTIONS

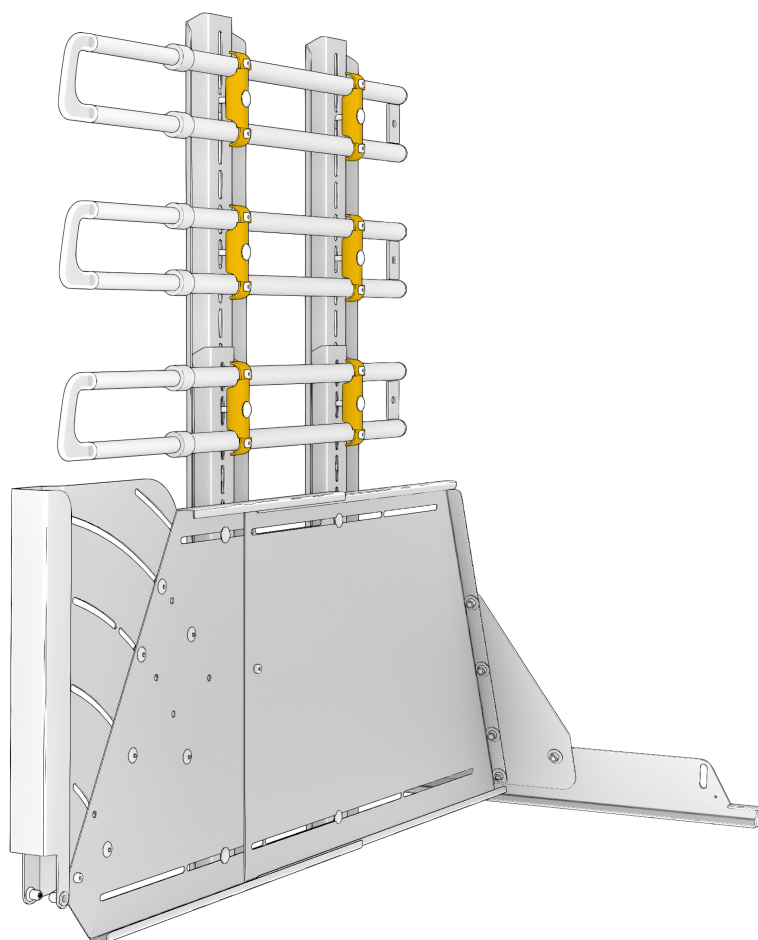

Scan to see the
video of these
instructions



IMPORTANT

GENERAL

VarioDivider separates the cargo in your luggage compartment. VarioDivider is intended for use in combination with VarioGate and **cannot be used as stand-alone**. Thanks to its robust and controllable design, the load is secured for lateral movement. VarioDivider is designed to withstand load and pressure from the sides. In the event of a collision, VarioGate is compressed longitudinally, thus effectively neutralizing the resulting forces. VarioDivider is made of galvanized steel painted with a very weather-resistant polyurethane paint suitable for its use. The product comes with straps for quick fastening and installation in the vehicle.

BEFORE YOU BEGIN

Ensure that you work on a flat surface. If the VarioDivider is assembled indoors, protect the floor with a blanket or carpet to avoid damage during assembly. Read the instruction carefully before you begin, it gives you a better understanding when you work step by step during the assembly. You can assemble the VarioDivider by yourself, but it helps a lot to be two during some of the assembly steps.

RECOMMENDED AREA OF USE

The VarioDivider must be installed together with a VarioGate single or double in the luggage compartment of the car.

DAILY INSPECTION

- Make sure the VarioDivider is intact
- That there's no sharp edges

CLEANING

Use a soft cloth with water and mild soap.


The story of MIMsafe

For more than 30 years, MIMsafe has worked with functional design and manufacturing of safety products for the modern automotive industry. With documentation from hundreds of crash tests and in close collaboration with the major car manufacturers, safe products have been developed and transformed into knowledge. Under the well-known brand name MIMsafe, we have become the leading manufacturer of crash tested and crush proofed non-whiplash dog cages all over the world.


MANUFACTURER

MIM Construction AB
Myren 125
SE-462 94 Frändefors
Sweden



+46 10 55 00 450
info@mim.se
www.mimsafe.com

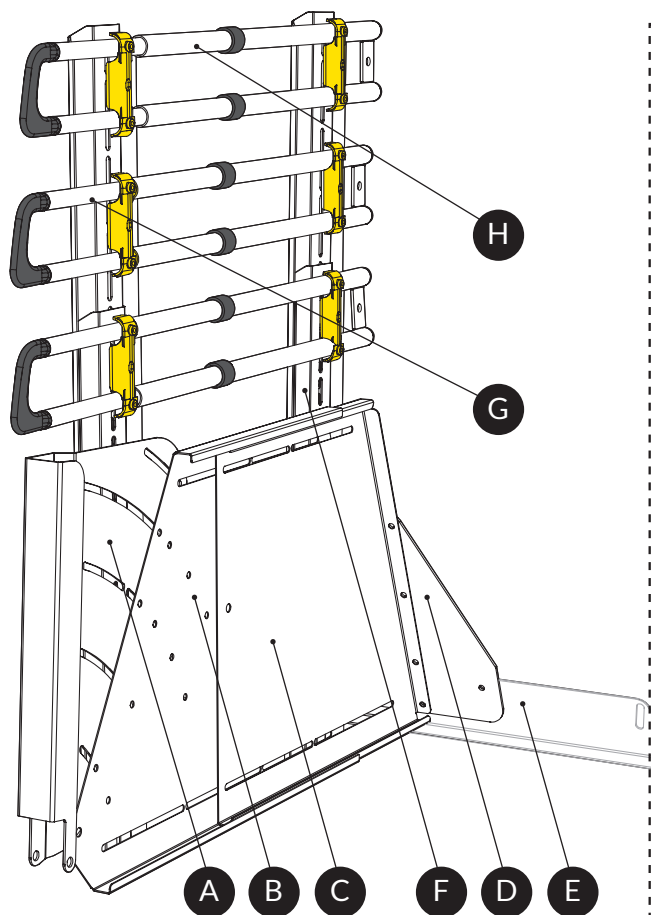


BAG #2 Product no. 53275-MS-A


F148D 1X 		F148A 1X 	
F148C 2X 	M-IF1410G 2X 	M-IKP1410S 2X 	
M-R3015M8S 4X 	M-BR8x19x1,5S 4X 	M-VBM8X16S 2X 	M-VBM8X25S 2X 

BAG #1 Product no. 53275-MS

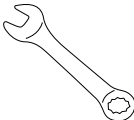M-460641D 3X  black rubber	ALLEN KEY DRIVER 1X 	COMB. SPANNER 1X 	M-10323 2X  700mm
---	--	---	--


M-SR3220M6S 6X 	M-VBM6X35 6X 	M-B251,56,5 SLD 6X  plastic	F247A 6X 	M-460641DG 12X  gray rubber
---	---	--	---	--

M-460641AY 6X  rubber end caps	M-460641AL 6X  plastic end caps	M-IKH2016-18s 6X  plastic end caps	M-MM6NyS 20X 	M-BR6x19x1S 20X 	M-VBM6x12FZB 4X 	M-SM6X12 16X 
---	--	---	---	---	--	---

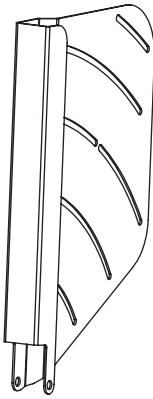


A Rear support

Art.no F357		
53275	1X	
53285		
Product no	No of items	

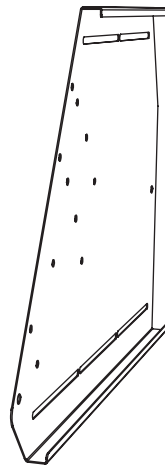


B Rear

53275	F359C	1
53285	F359D	1
Product no	Art. no	No of items

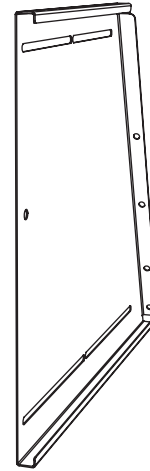


C Front

53275	F359A	1
53285	F359E	1
Product no	Art. no	No of items

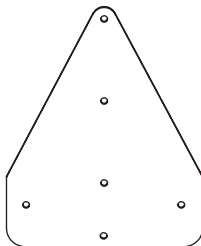

D Front support

Art.no F606		
53275	1X	
53285		
Product no	No of items	

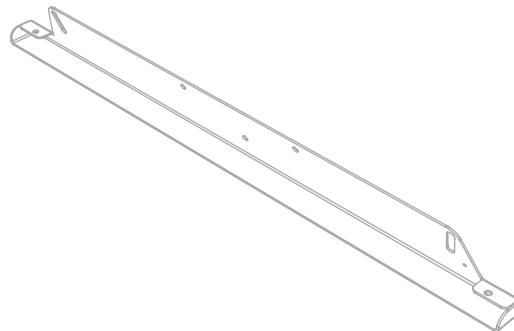


E Front floor plate

Art.no F530		
Article already included in your chosen VarioGate model.		




F Rail

Art.no F358		
53275	4X	
53285		
Product no	No of items	

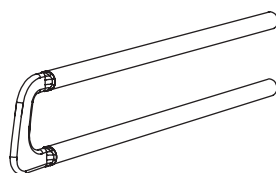

G Adjustable bracket



53275	F521	3
53285	F521A	3
Product no	Art. no	No of items

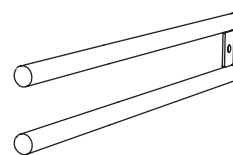

H Bracket

Art.no FS222A	
53275	3X
53285	
Product no	No of items

STEP
1

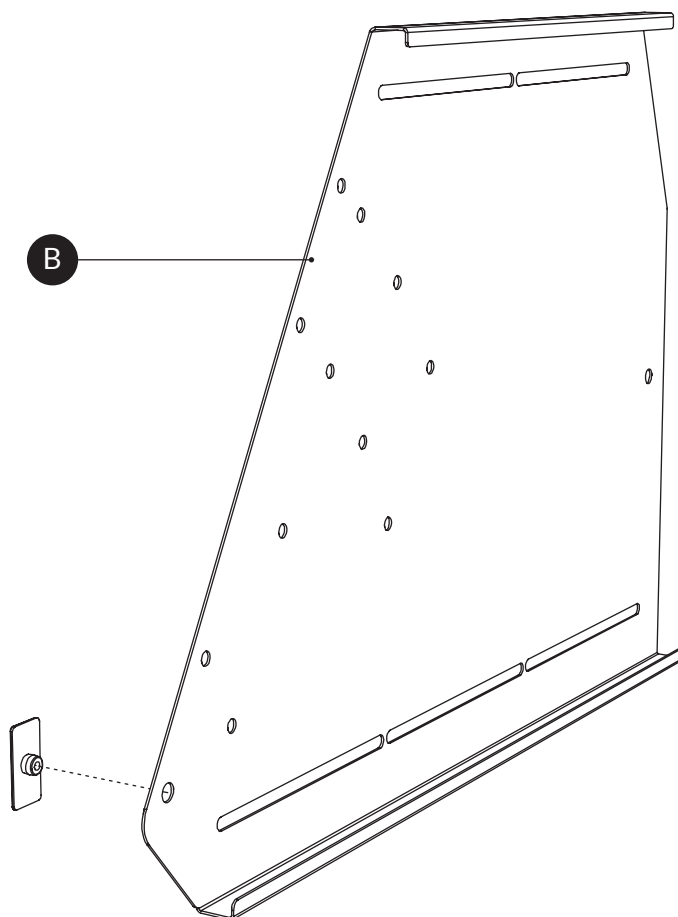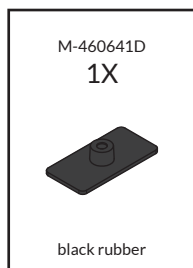


STEP
2

A




IMPORTANT!

Tilt the A section to match the
angle of your car's boot lid

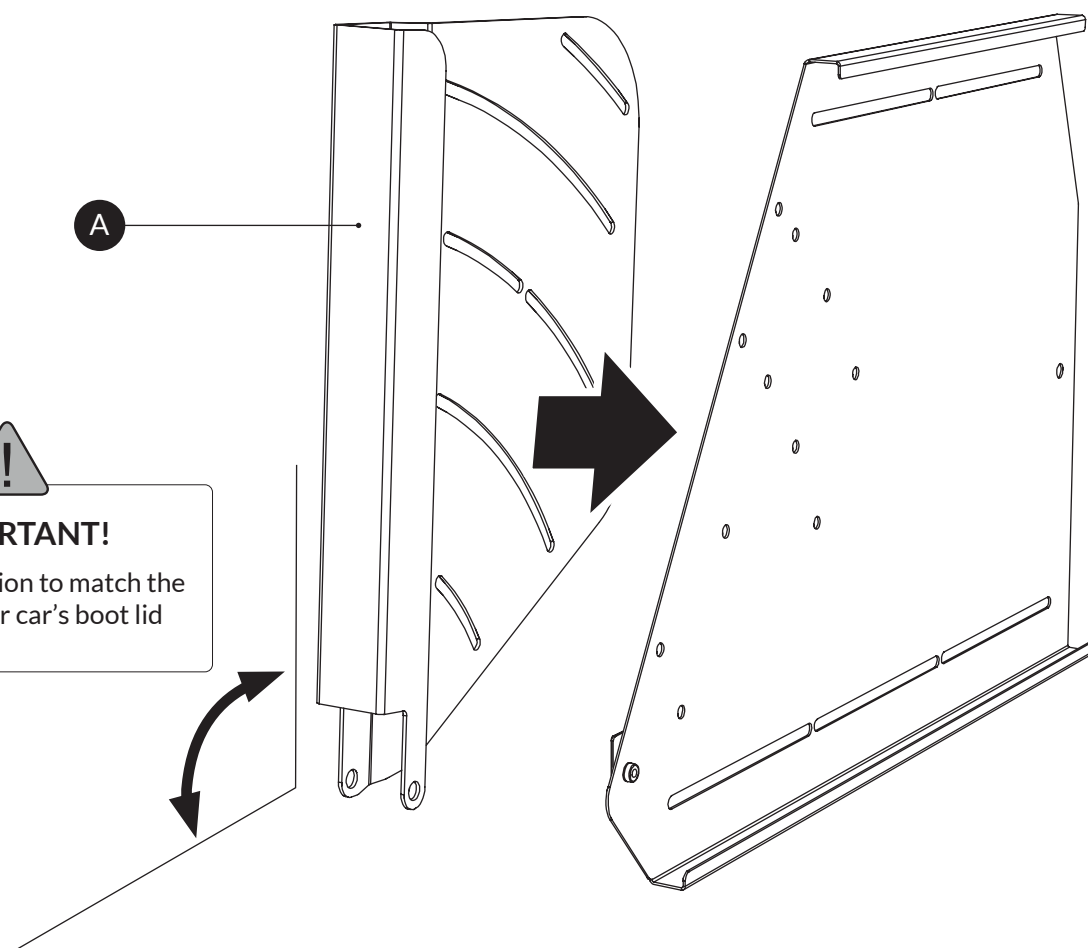

STEP
3

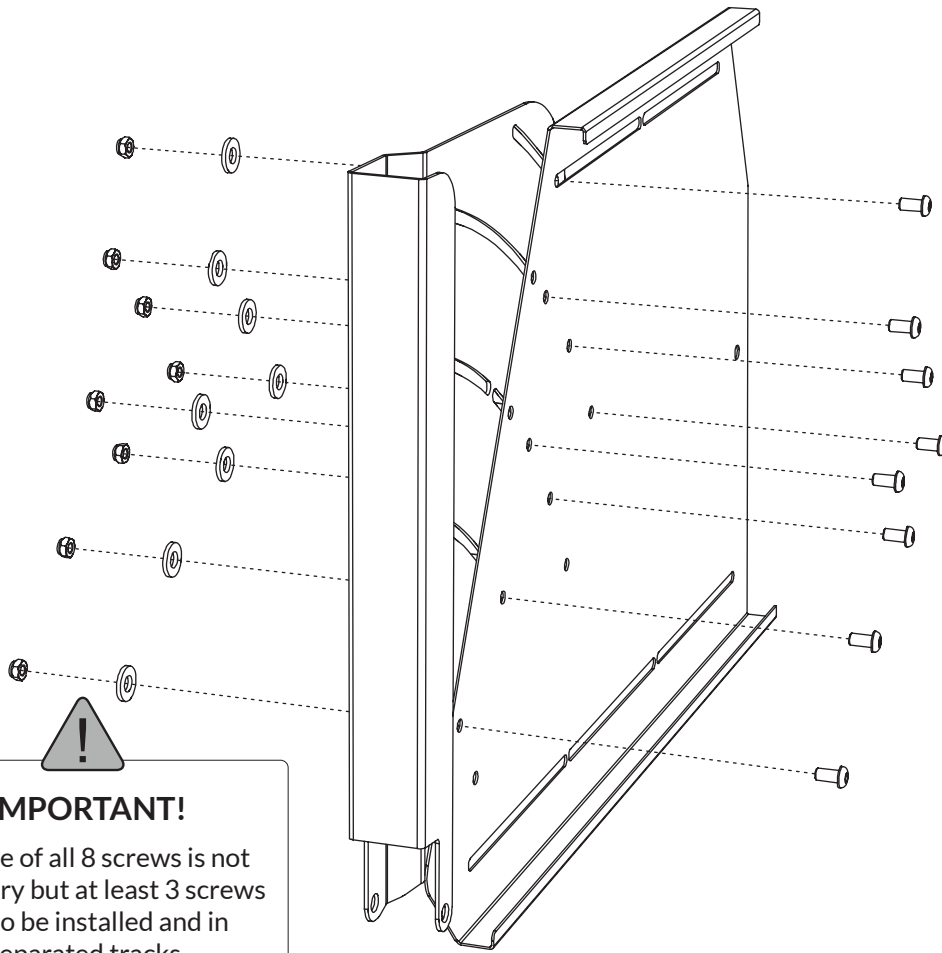


M-MM6NyS 8X

M-BR6x19x15 8X

M-SM6X12 8X


STEP
4

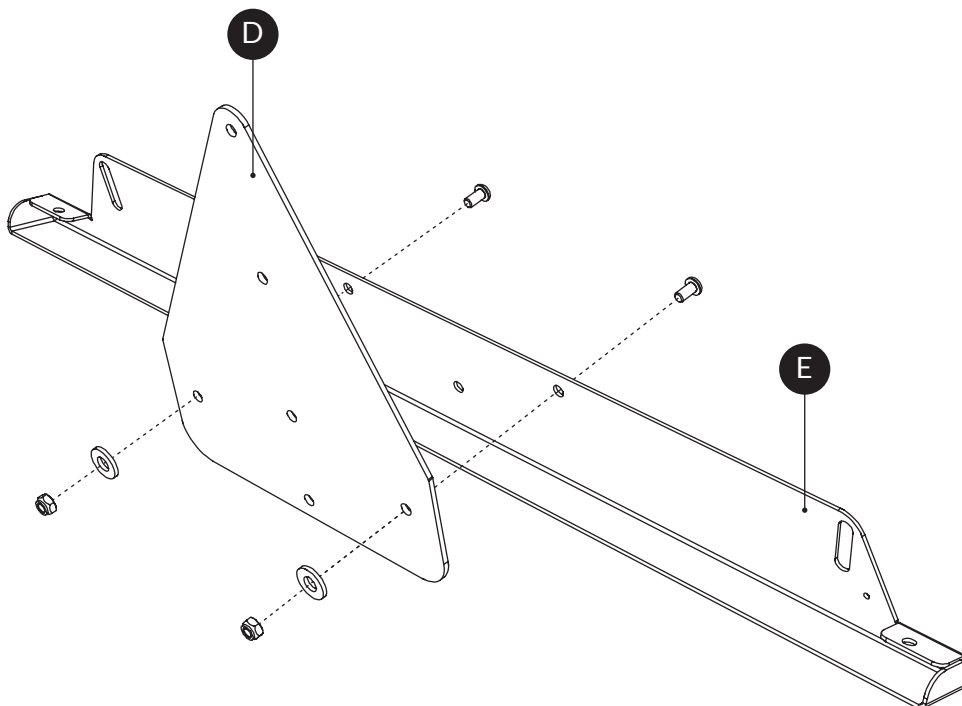


M-MM6NyS 2X

M-BR6x19x15 2X


M-SM6X12 2X


STEP
5

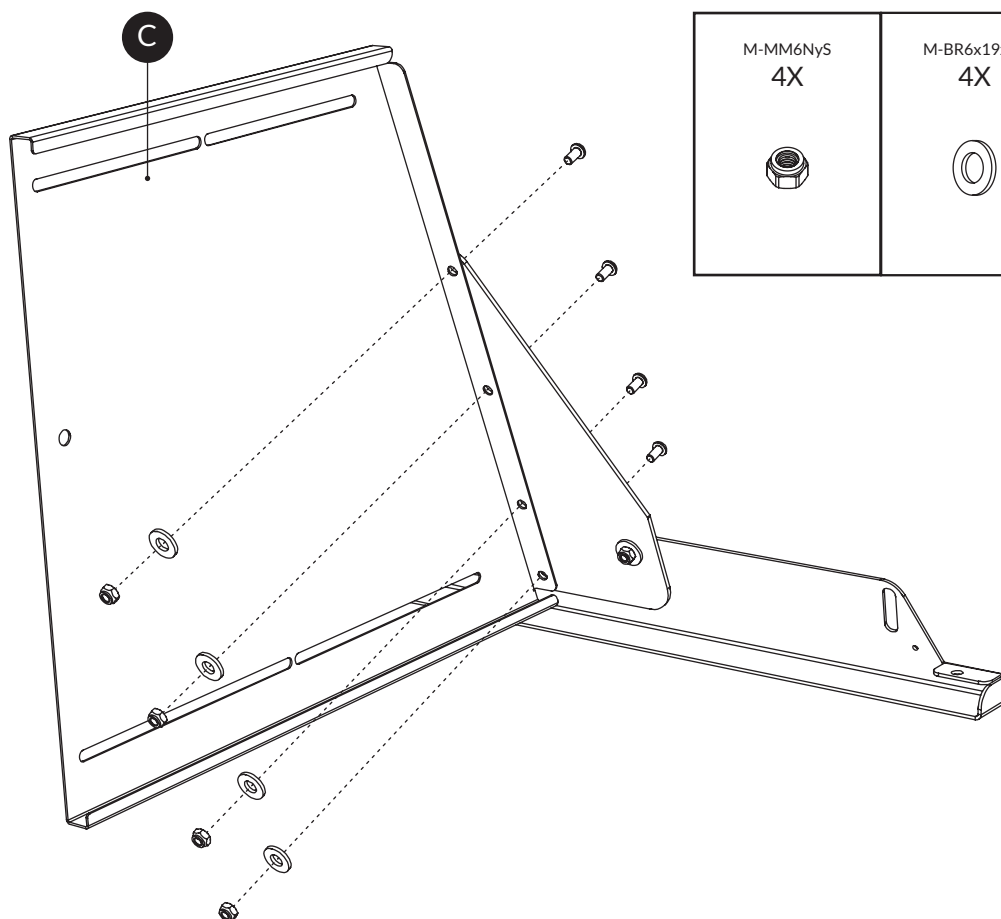

M-MM6NyS 4X	M-BR6x19x1S 4X	M-SM6X12 4X
		


STEP
6

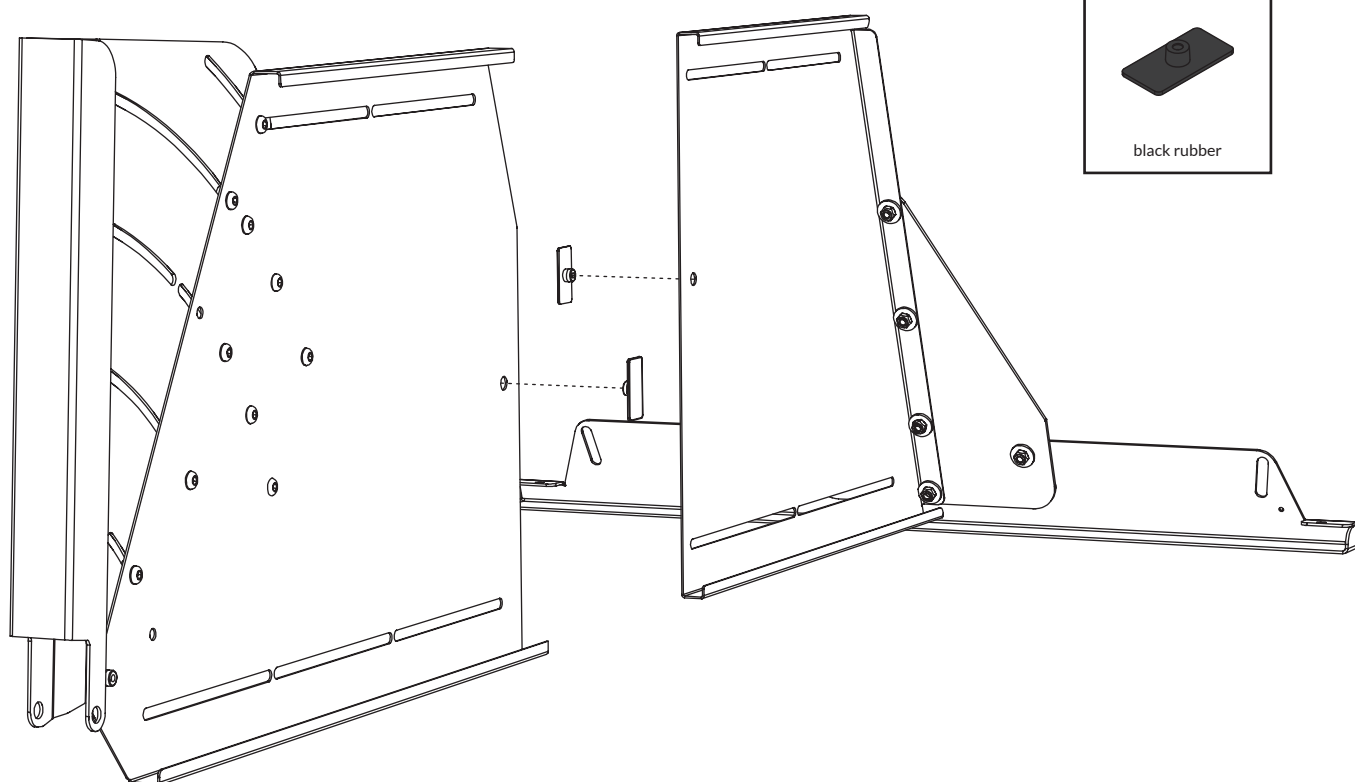


M-460641D 2X

black rubber

STEP
7

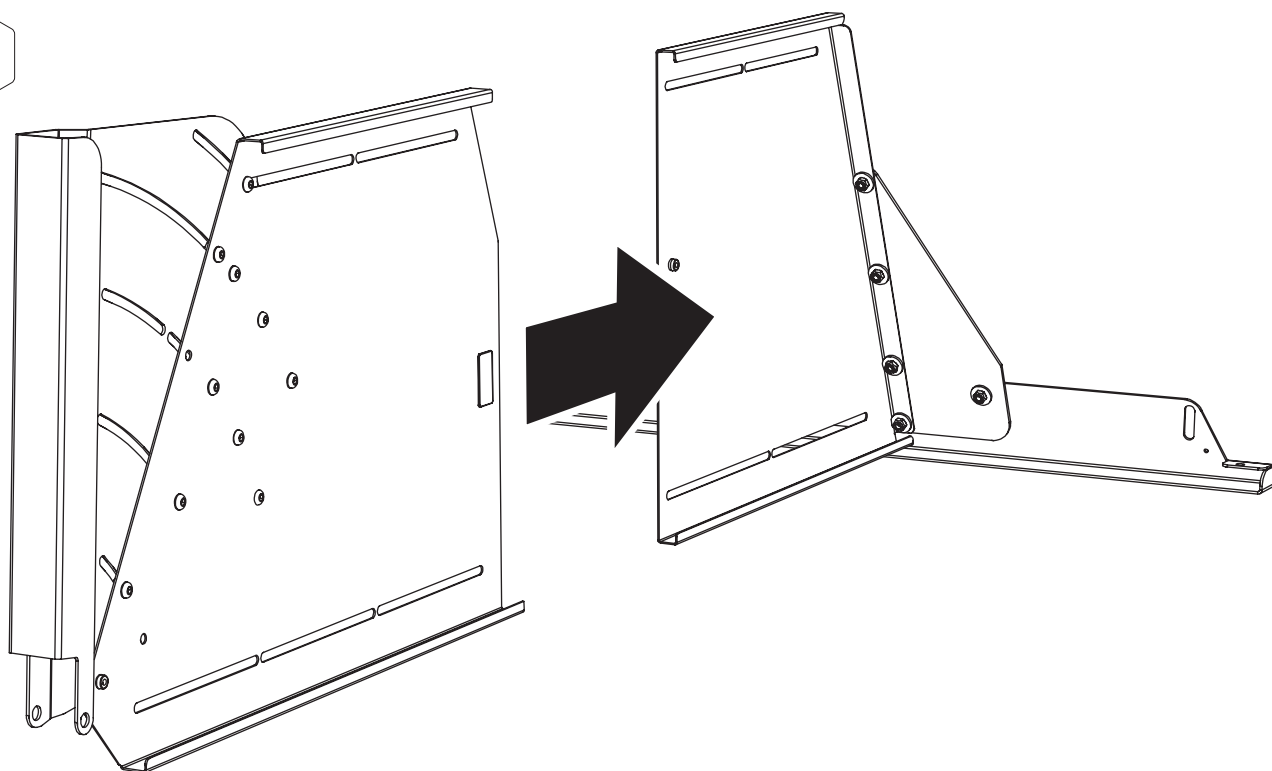


STEP
8

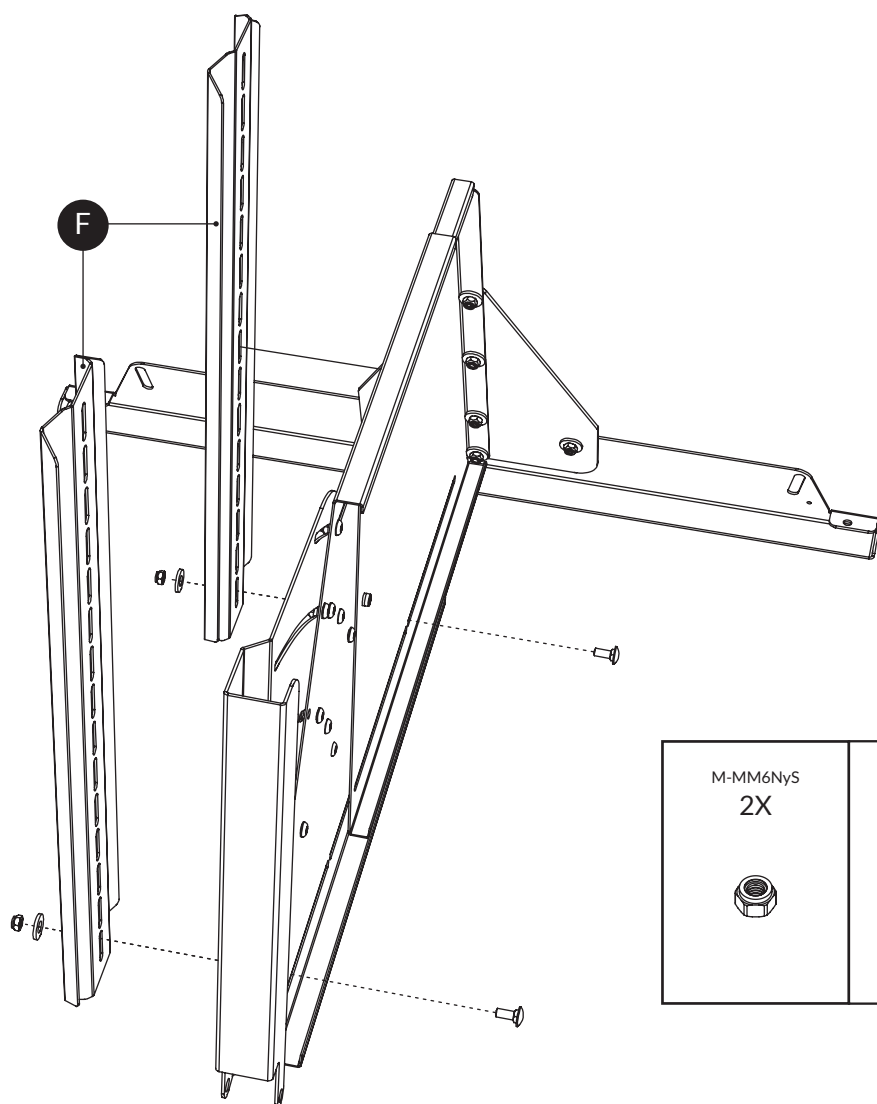



M-MM6NyS 2X	M-BR6x19x1S 2X	M-VBM6x12FZB 2X
		

STEP
9

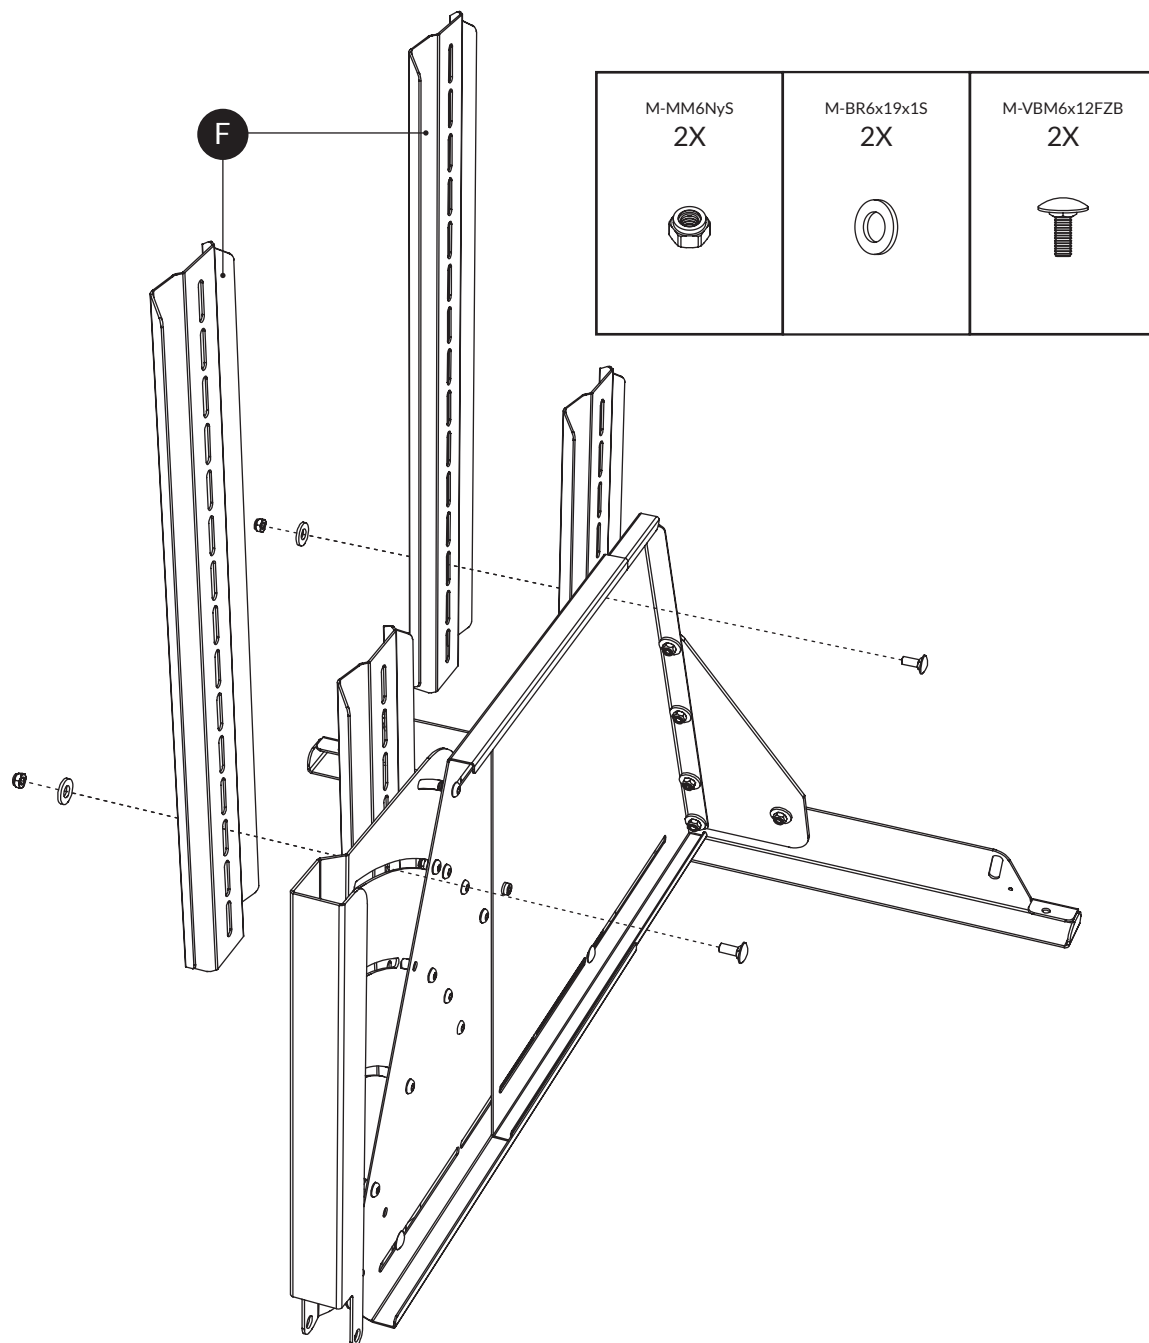


STEP
10

6X

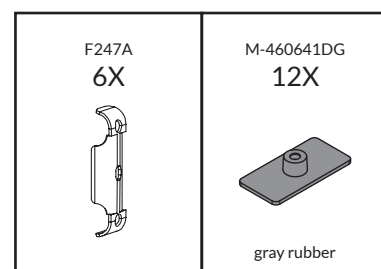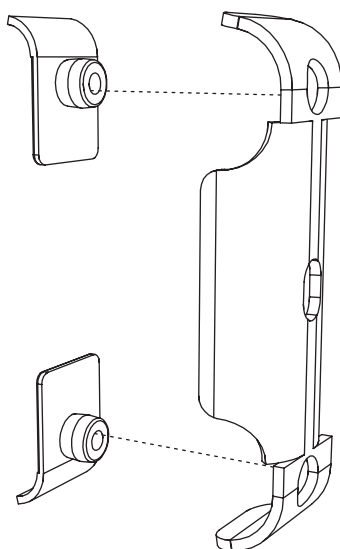


STEP
11

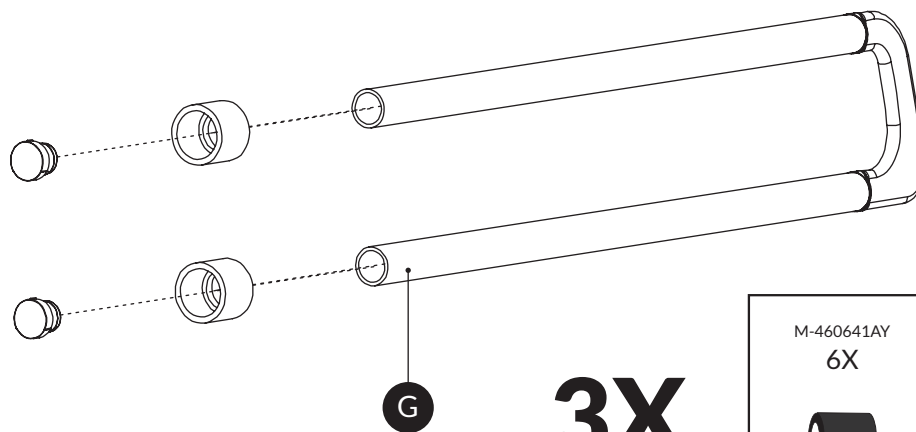

3X

M-460641AY 6X	M-460641AL 6X
rubber end caps	plastic end caps


STEP
12

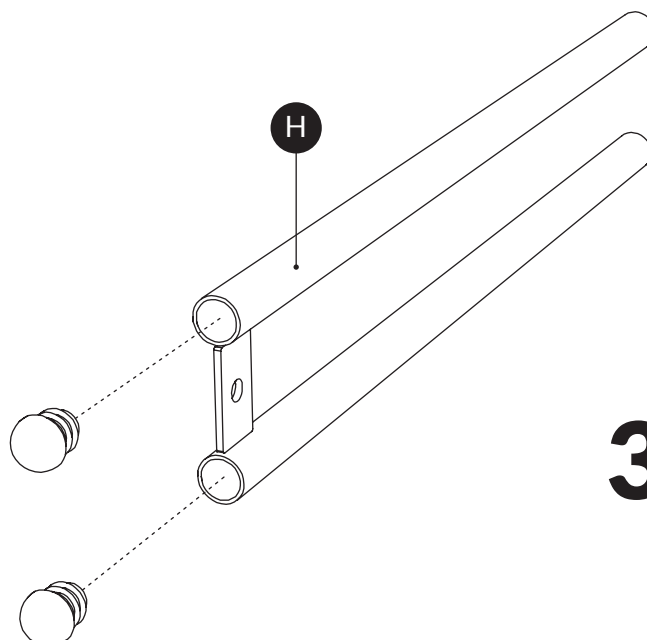


3X

M-IKH2016-18s 6X
plastic end caps






STEP
13

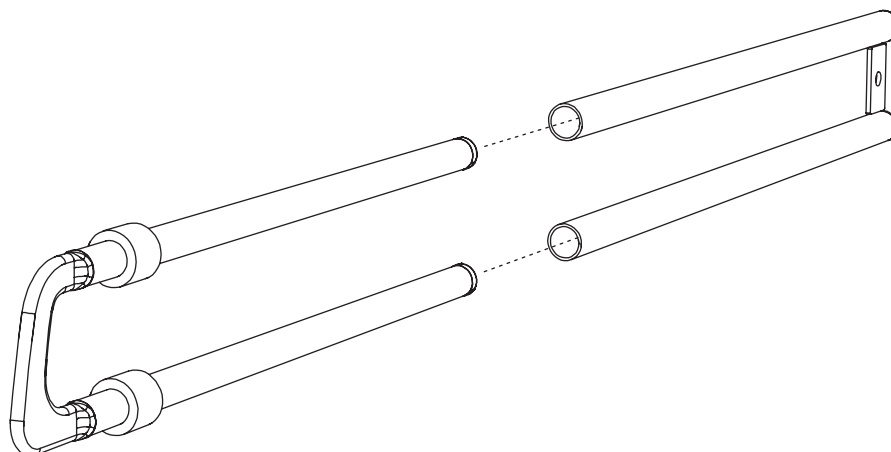

3X



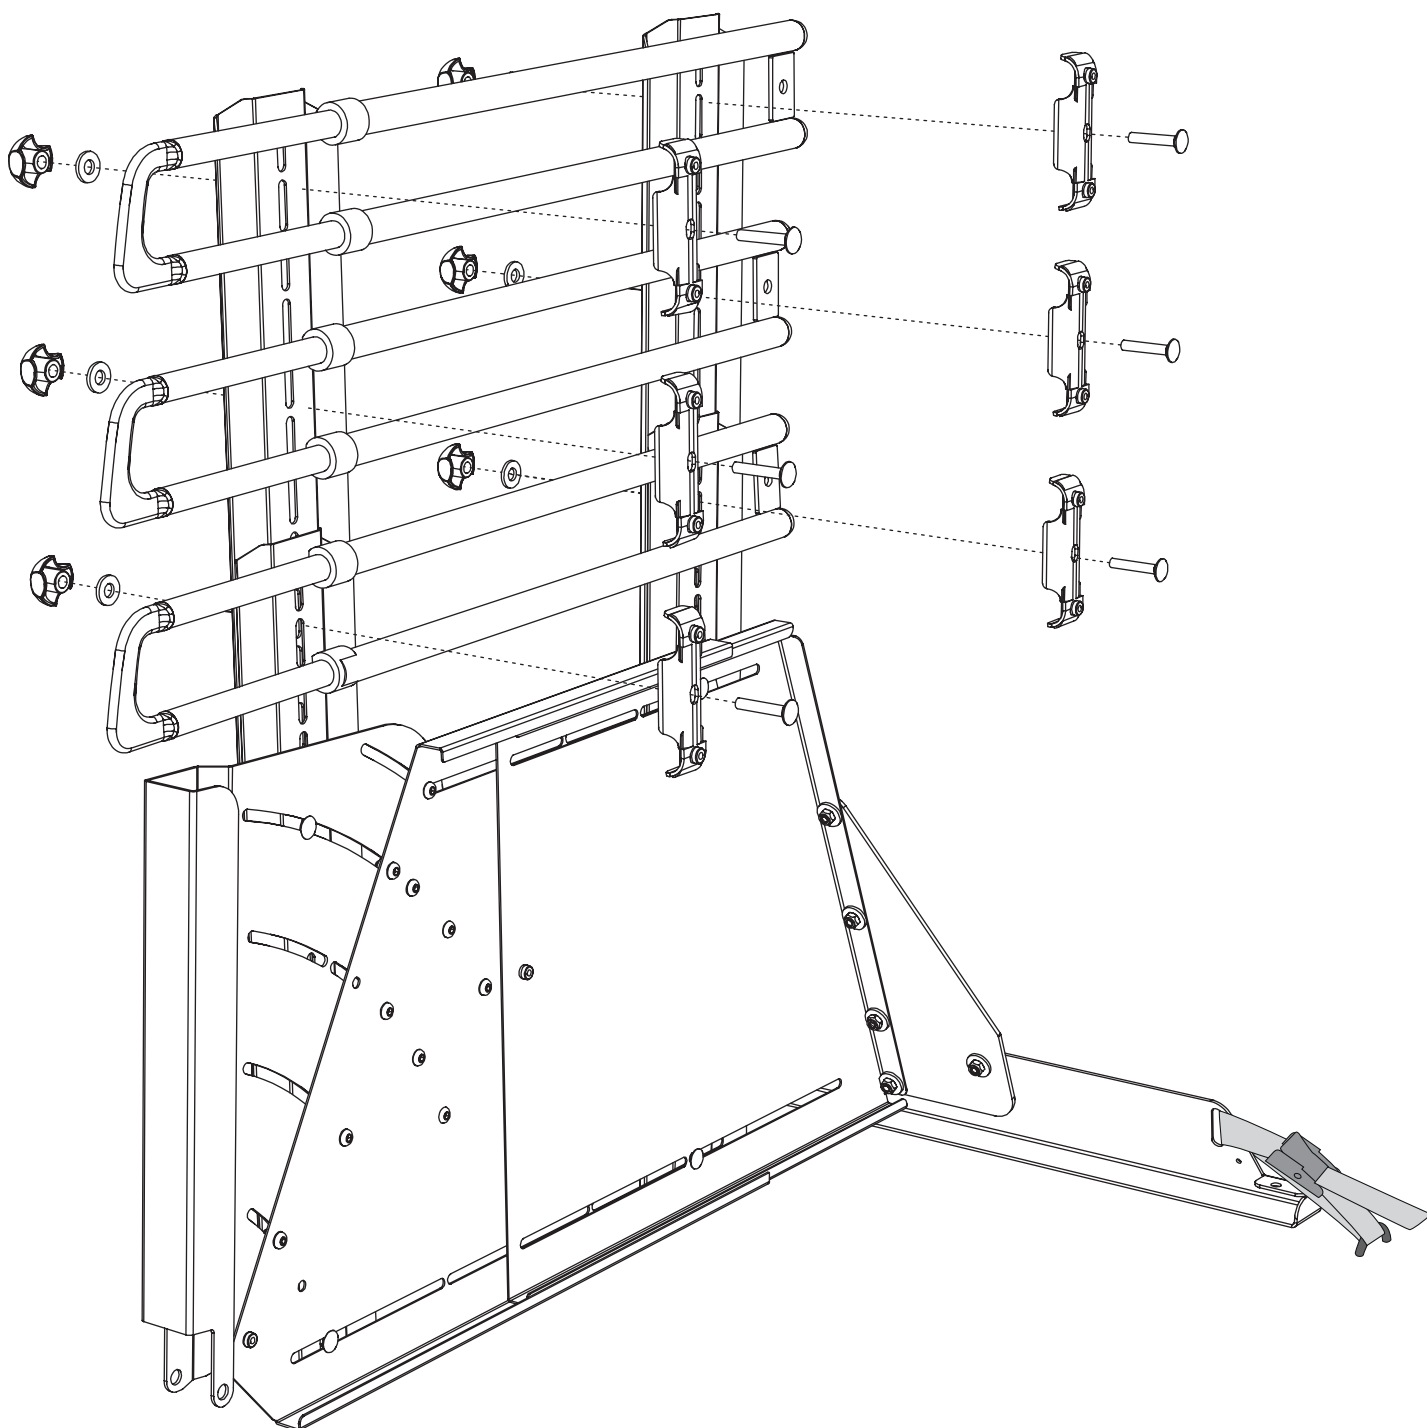


M-SR3220M6S 6X 	M-VBM6X35 6X 	M-B251,56,5 SLD 6X  plastic	M-10323 2X  700mm
---	---	--	--

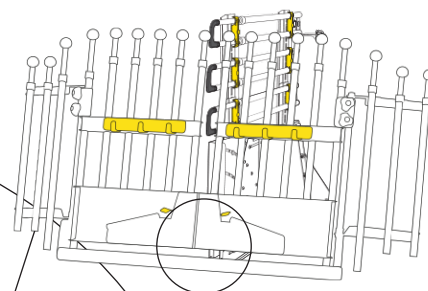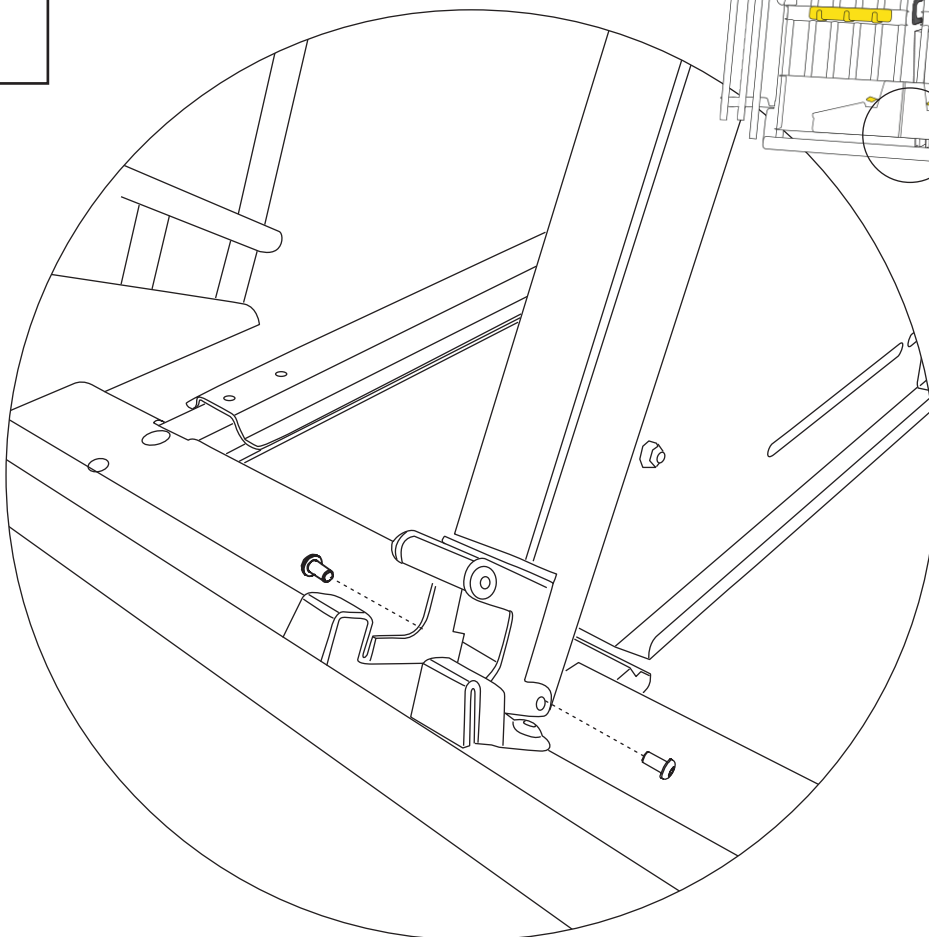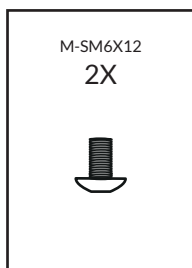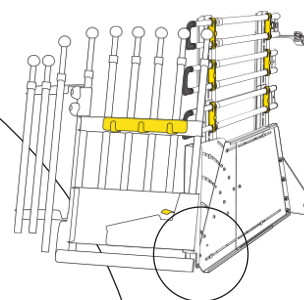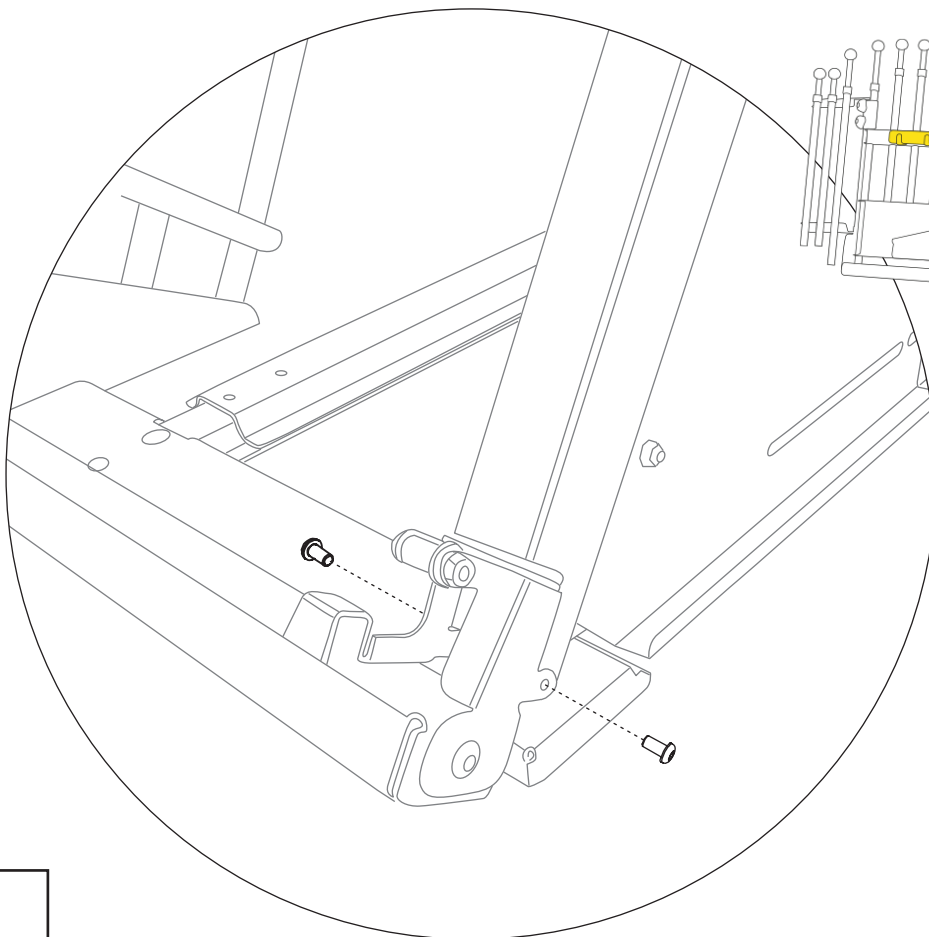



STEP
16

**OPTIONAL
RECOMMENDED**

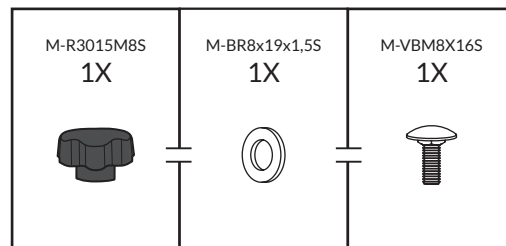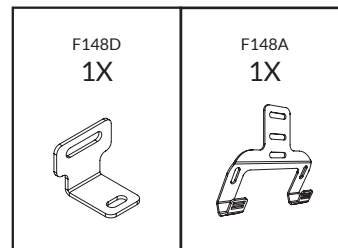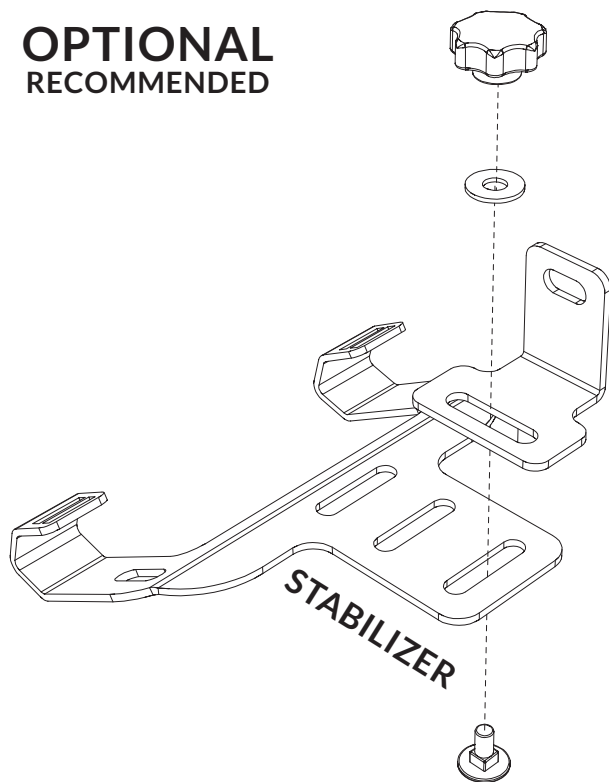

STEP
17

**OPTIONAL
RECOMMENDED**

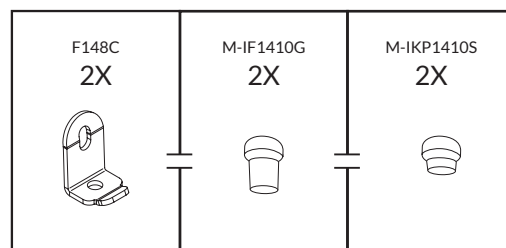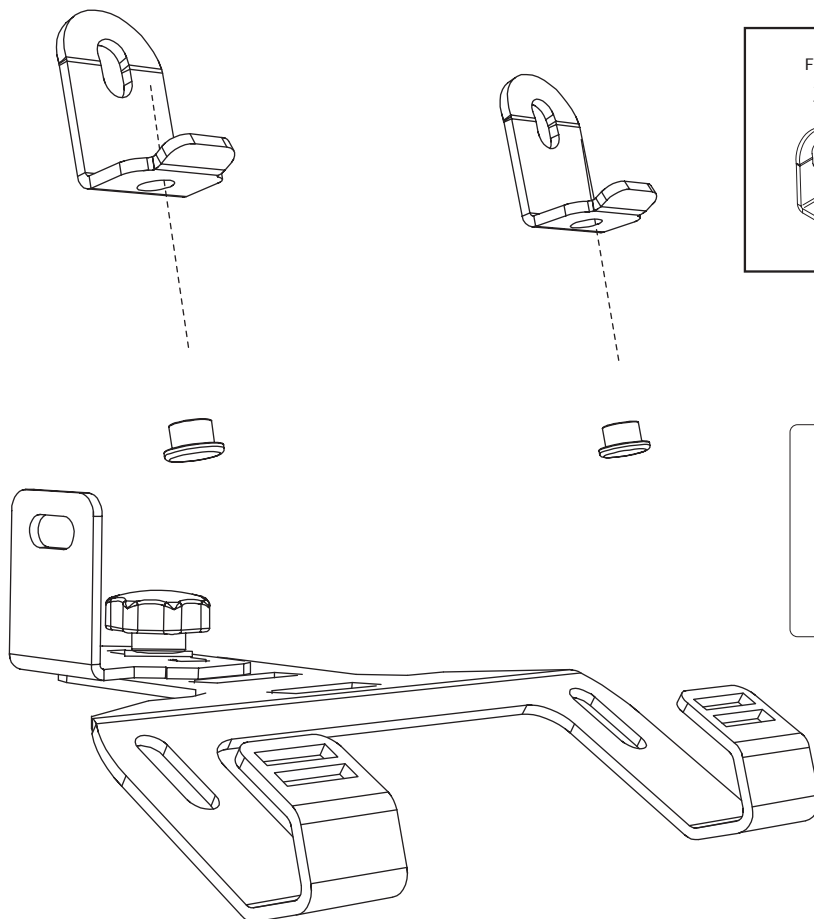


IMPORTANT!

Use M-IF1410G or
M-IKP1410S depending on the
pipe's thickness of you barrier


STEP
18

**OPTIONAL
RECOMMENDED**

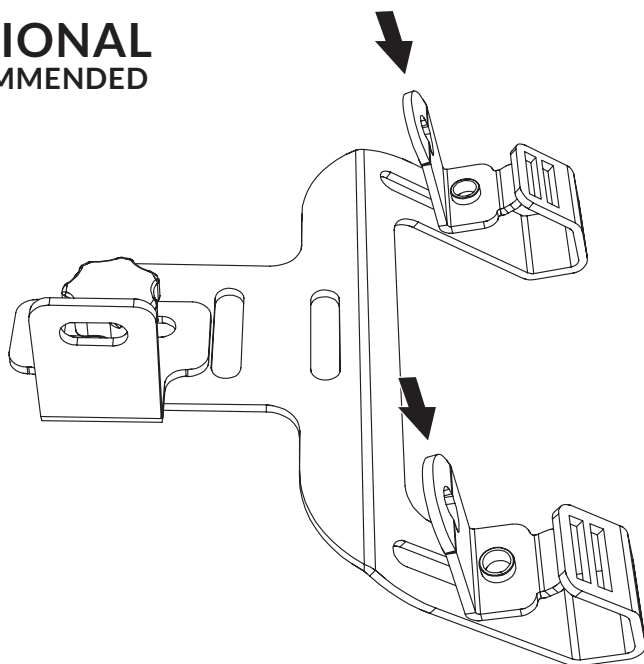

STEP
19

**OPTIONAL
RECOMMENDED**


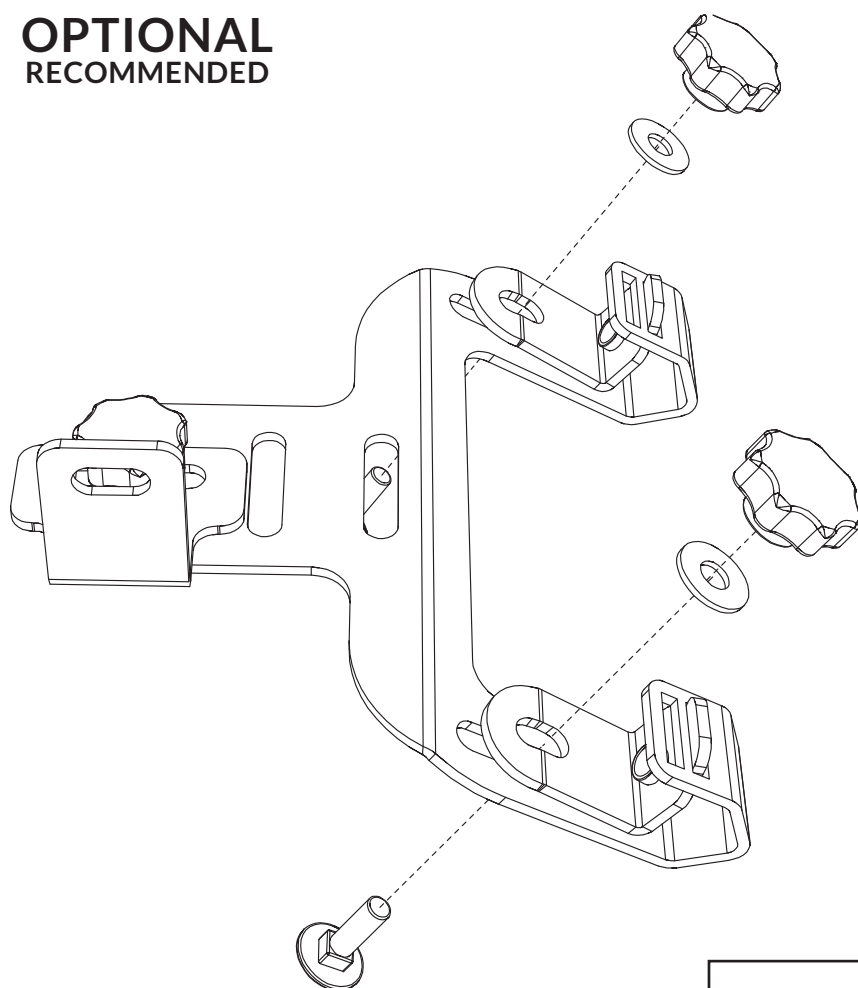


M-R3015M8S 2X	M-BR8x19x1,5S 2X	M-VBM8X25S 2X

STEP
20

**OPTIONAL
RECOMMENDED**

M-R3015M8S 1X	M-BR8x19x1,5S 1X	M-VBM8X16S 1X
		

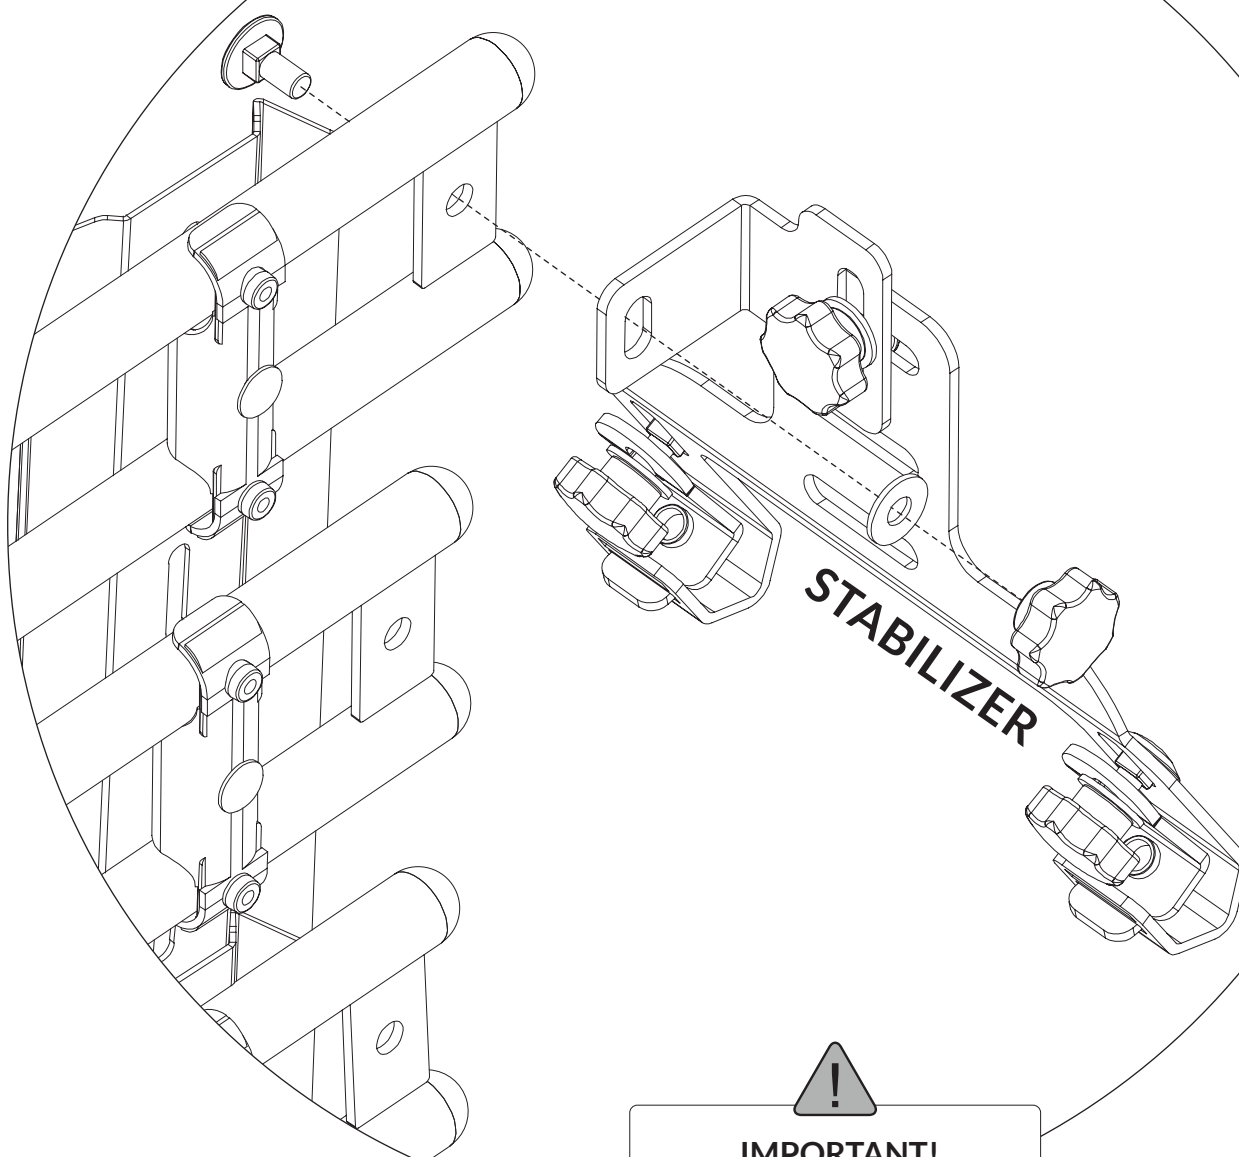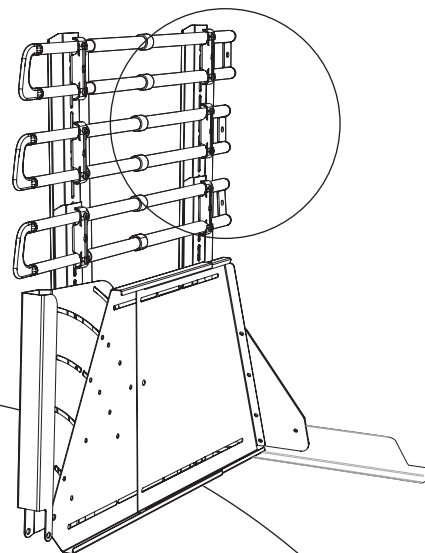

IMPORTANT!

Use this last part to attach the
VarioDivider to your barrier of
choice.